

Horizontal and Vertical Stand User Manual




TABLE OF CONTENT

- ◆ Parts and Components
- ◆ Lamp assembly

SAFETY INFORMATION

- ⊙ Personal injury or product damage can result from improper installation or assembly
- ⊙ Please follow the guidelines before installing.
- ⊙ Do not install or assemble if the product or hardware is damaged.
- ⊙ This product contains moving parts, please use with caution.
- ⊙ Maximum load capacity should below 15KG.
- ⊙ All images provided are to be used as reference for installation.

PARTS AND COMPONENTS

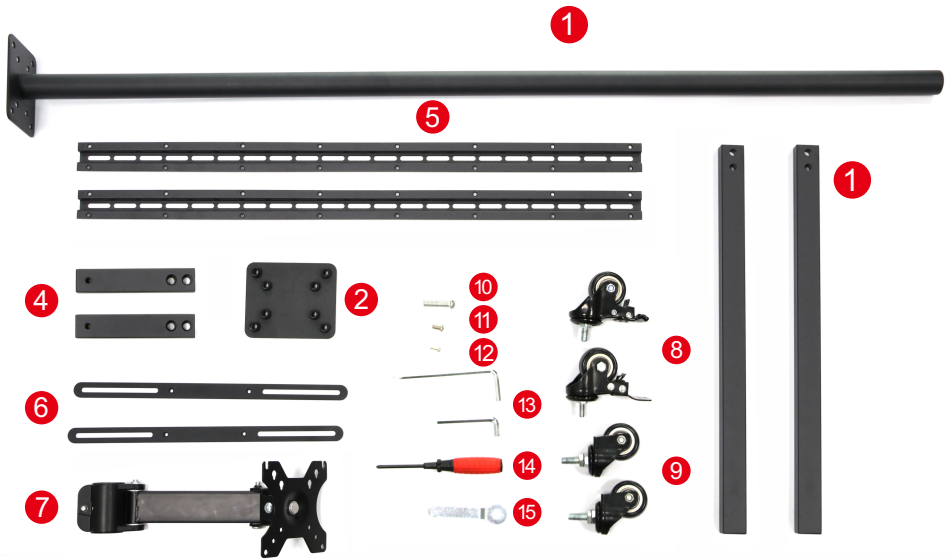

No1	1.2M Pole	x1
No 2	fix panel	x1
No3	Long leg pole	x2
No4	Short leg pole	x2
No5	Long fixture	x2
No6	Short fixture	x2
No7	Lamp holder	x1
No8	Rear wheel	x2
No9	Front Wheel	x2
No 10	M8 screw	X8
No 11	M5 screw	x24
No 12	M3 screw	x4
No13	short L-type Allen Wrench	x1
No 14	Cross screw driver	x1
No 15	Allen wrench	x1

INSTALLATION

1



1.Put No.3 Long leg pole and No.4 short leg pole above No.2 fix panel as the above picture show

2



2. Put No.1(1.2mpole)above system1 and fix with No.10 (M8 screws). screw to the bottom by your hands first and then you can use No.14 (short L-type Allen Wrench) to fix it tight.

Note: make sure all the screws have well put on the holes before you fixed one by one

3



3. Install No.8 (Rear wheel) to the No4 (Short leg pole holes) on the back

4. Install No.9 (Front Wheel) to the No3 (Long leg pole holes) on the back



5. Slowly spin No.7 (lamp holder) from the top of the 1.2m pole and adjust the height with No.13 and No.14 (loose or fix the lamp holder)

Congratulations
you have finished the stand install parts!



Step for Install the Inferno 1400w



Match No. 5 (fixed long rod) with the fixing hole on the back of the therapy light, and fix it with No. 11 (M5 screw).




Fix No. 6 (fixing short rod) above No. 5 (fixing long rod) with No. 11 (M5 screw).
Fix 2 # 11 (M5 screws) to the screw holes (arrow positions) in the same direction on # 6 (fixing short rod), and the screws only need to be locked in 2/3 of the way.



Place the screw gap on the fixing panel of No. 7 (fixing frame) facing upward, and place the 2 screws of No. 11 (M5 screws) on the therapy light vertically into the screw gap.



Make sure the notched part of the lamp bracket screw hole is facing up

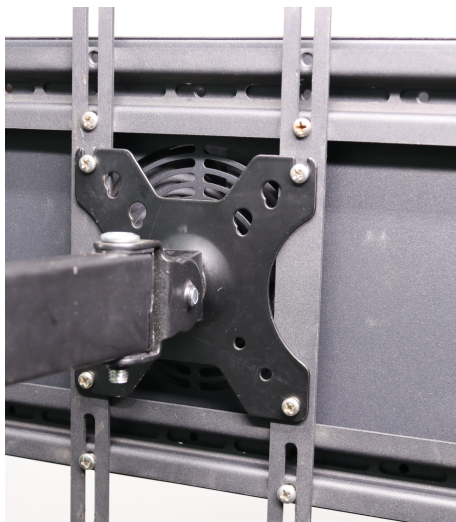

Fix the remaining 2#11 (M5 screws) to the fixing panel and lock all screws securely

The above installation is complete!

Horizontal and Vertical Stand User Manual